




# Audiovox T752 Screen Replacement

A guide to replacing your device's screen.

Written By: Logan

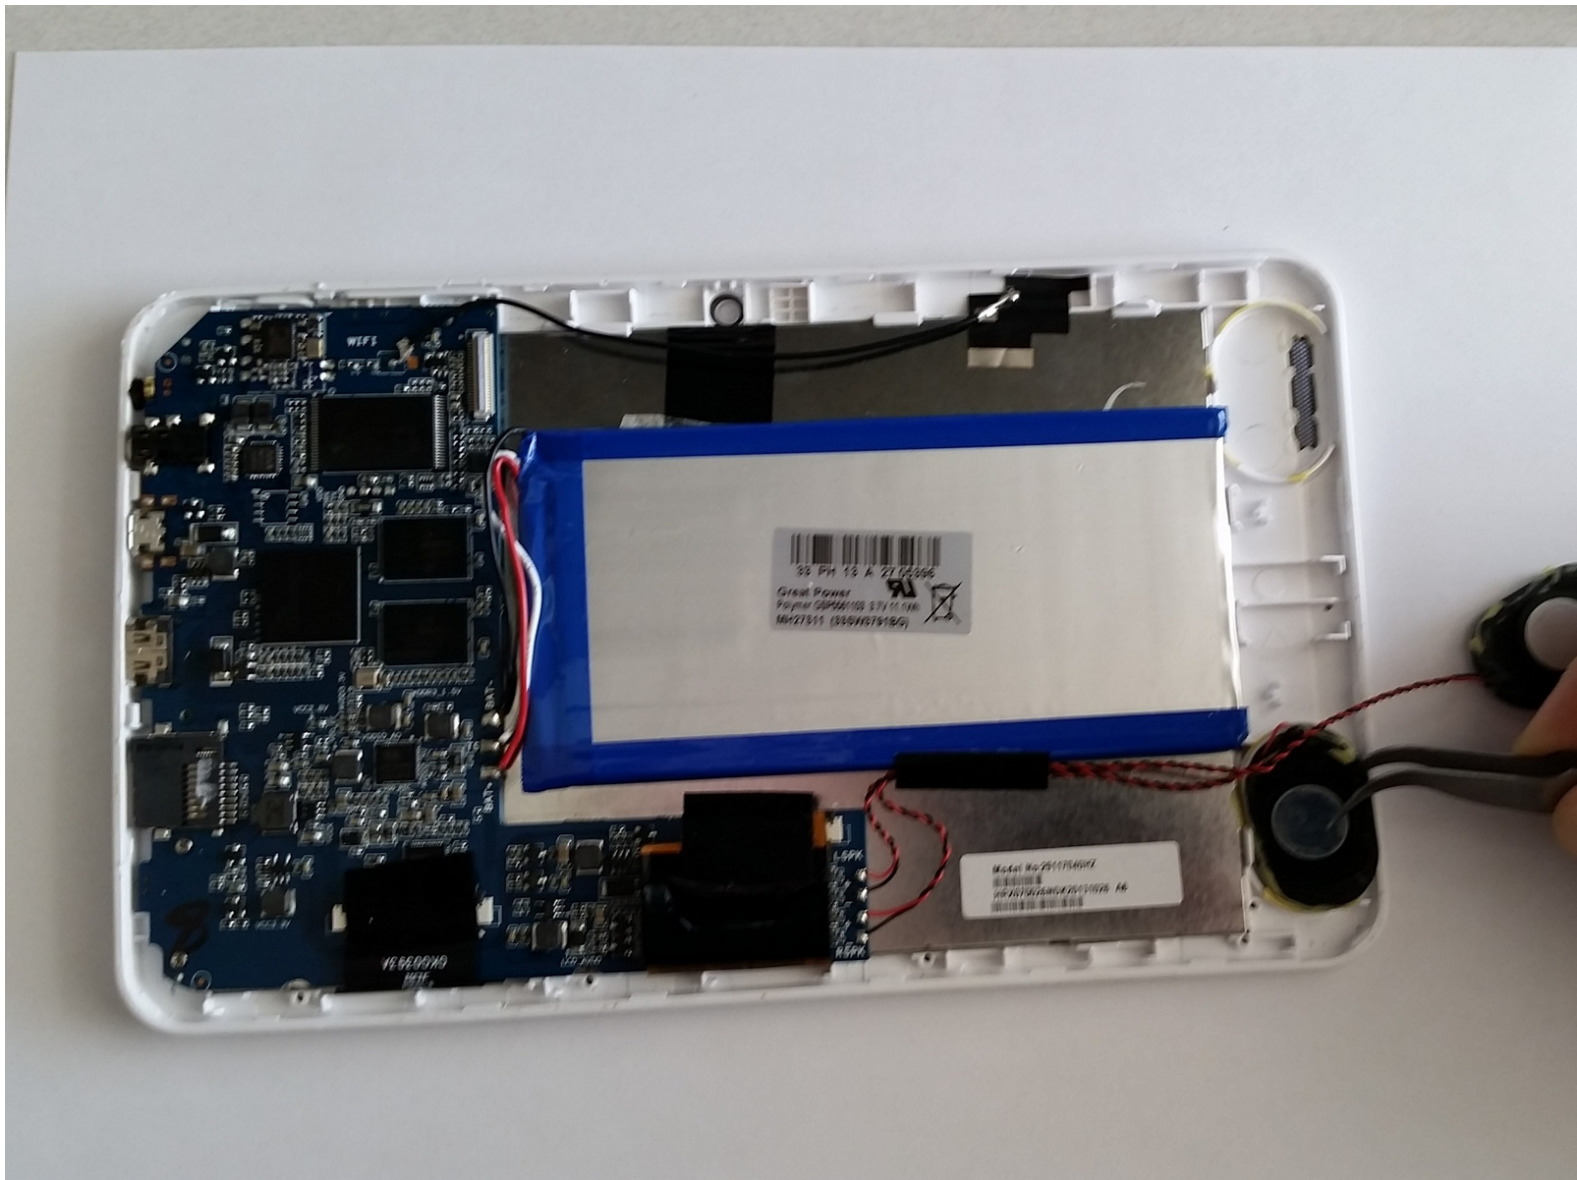



## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)



## PARTS:

- [Audiovox T752 Front Housing](#) (1)

## Step 1 — Back Panel



- Find a good spot to fit the pry bar between the back cover and tablet. Slowly drag the pry bar along the sides of the cover.
- **NOTE:** some force will need to be used to remove the cover. Avoid excessive force.


## Step 2 — Screen



- Remove the speakers.





## Step 3

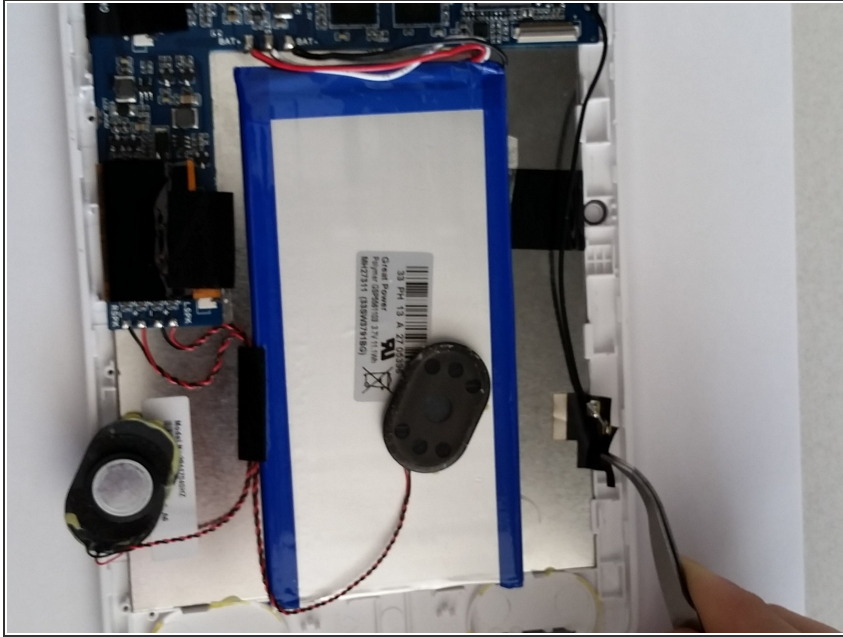

- Remove any adhesives (such as tape).

## Step 4

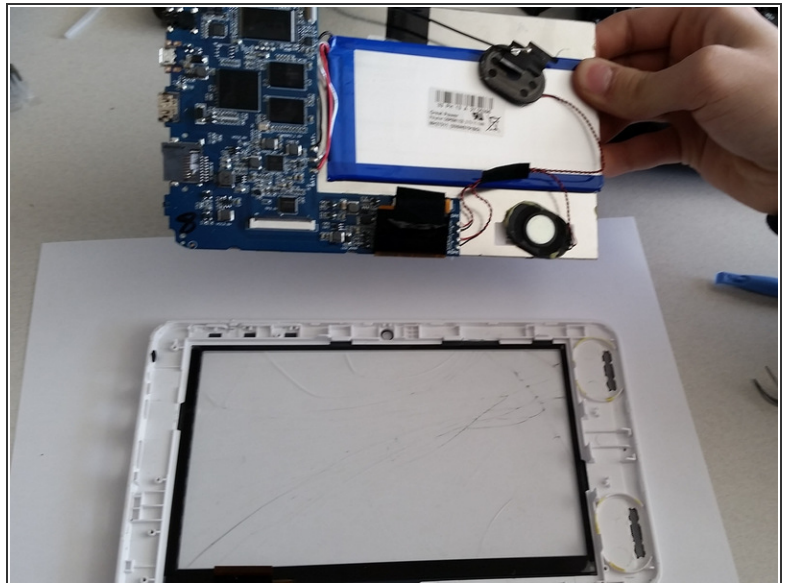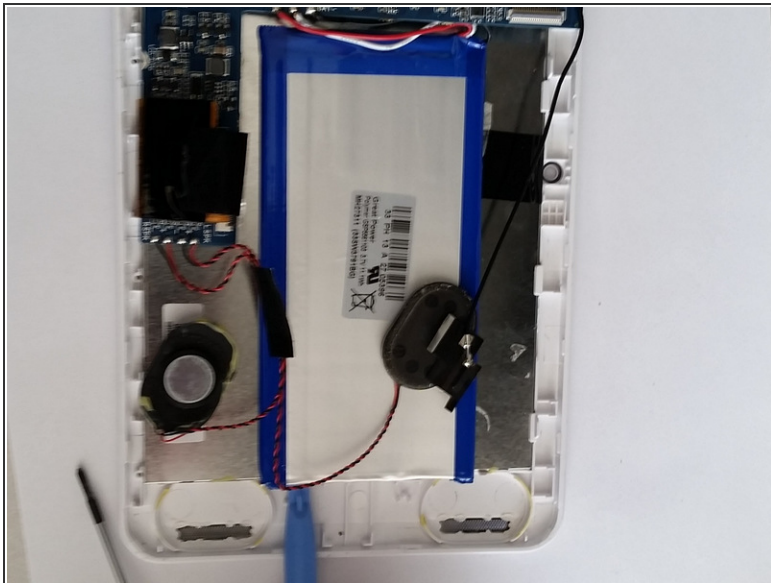

- Pry under the aluminum touch screen to remove the remaining components from the front housing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 07:10:22 AM.

